

Quick Reference Guide

Basic Operation:

1. Ensure the vehicles ignition is on ACC/ON
2. Wait until the handset is registered on the network
3. Once registered house appears you can make a call
4. You are now ready to make a call

Making A Hands Free Call:

1. Enter the number you wish you call
2. Use the + symbol for international calls
3. Once the number is entered the Call?, will appear
4. Press OK to attempt call
5. To end call " End Call?" appears press OK
6. To end call press C

Making A Private Call:

1. Remove handset from cradle/holder
2. Enter the number you wish you call
3. Use the + symbol for international calls
4. Once the number is entered the Call?, will appear
5. Press OK to attempt call
6. To end call " End Call?" appears press OK
7. To end call press C or replace handset in cradle

Changing From Private to Hands -free:

1. Press mute key on the handset
2. Replace the handset into the hang -up cup
3. You are now in direct conversation with Speaker & Mic

OR

1. Press MENU key until 'mute' appears then press okay
2. Replace the handset into the hang -up cup
3. You are now in direct conversation with Speaker & Mic

CAUTION: If you return the handset to the hang -up cup without muting first, your call will end.



Special Features:

Adjust Earpiece volume:

Press up and down volume key on handset whilst on a call.

Adjust Ringer Volume:

Press up and down volume keys, whilst not on a call

Receiving a Hands -free Call:

1. In call alert leave the handset in the hang -up cup
2. Press OK to answer call
3. Direct your conversation to the hands -free mic
4. To end call " End Call?" appears press OK
5. To end call press C

Receiving A Personal Call:

1. In call alert, remove handset from hang -up cup
2. Call should answer if removed from hang -up cup
3. Direct your conversation to the handset
4. To end call " End Call?" appears press OK
5. To end call press C

Display Indicators:

| | |
|--|------------------------------------|
| | Message Waiting Indicator |
| | Signal Strength Indicator |
| | Phone Registered on Network symbol |
| | In-use Indicator, Call In Progress |
| | No Service Indicator |
| | |



Quick Reference Guide

Dialing From Phone book :

1. Press the MENU UP arrow
2. "Find Name?" appears
3. Press OK
4. "Enter Name?"
5. Enter the key of the corresponding letter (2 for A)
Or Press OK and then use the across arrows to scroll
6. "Call ?" appears, press OK to make call
7. Press C to go back or MENU button again

Using The Menu System

1. Press the MENU key once
2. Keep pressing Menu to scroll through the options
3. Press OK to select
4. Press C to go back
5. Use MENU scroll and arrow keys for options

Reading A Message:

1. A message is received when the envelope appears or Message Received appears on the display
2. If message Received appears then simply follow prompt.
3. If only the envelope is showing then press MENU
4. Press MENU key until "Messages?" appears
5. Press OK to select message options
6. From here you can read, delete and save messages

Voicemail & Text Messages will appear like this



Deleting A Message:

1. A message can be deleted from in the message options
2. From "View Options?" select OK
3. Press MENU to scroll the options
4. From here you can delete, store, edit
5. Press OK to confirm selections, press C to go back
6. Press C to go back

Creating a Text Message SMS:

- 1/ Press the MENU button to Message View Options?"
2. Press OK to select
3. Press MENU until "Message Editor ?" appears
4. Press OK to select
5. Construct message using keypad.
6. Press OK
7. Select options, "Send?" or "Store?"
8. Press OK to select
9. To send enter the phone number or view phonebook
- 10 Send or Save message ?
- 11 Press OK
- 12 Press C to go back

Telstra Satellite Dialing Sequence:

For any call within Australia you must

1. Always enter the area code of the phone number
2. There is no need to enter 0011for within Australia
3. Call to outside Australia require wither "+" or "0011"
4. To contact Emergency Services call "000"

Trouble Shooting :

| Message | Description |
|---|--|
| Call failed System Busy Weak Signal | The phone is unable to access the satellite network. Try again in a few minutes. |
| Blocked | If the SIM card pin is incorrectly entered more than 3 times in a row. Refer to your service provider |

Trouble Shooting:

| Message | Description |
|----------------------------|---|
| Searching... | The phone is attempting to establish connection with the satellite network |
| Registering | Your phone is registering with the network. When complete you will see Registered. |
| Enter Phone Unlock Code | Your phone had been locked after the last use. Enter your four digit unlock code for the phone/ NOT SIM PIN and press OK. |
| Enter PIN | Enter the four digit SIM card PIN code as provided by your Service Provider and press OK to proceed. |
| Insert Card | Power off your terminal and make sure your SIM card is inserted correctly, power the unit on again. |
| Check Card | This message indicated that the SIM card is damaged or inserted the wrong way. |
| Bad Card | Refer to your Service Provider |



Distributed by Beam Communications Pty Ltd
Melbourne, Australia. www.beamcomm.net